


How to Install the Ozone Generator to a Jet

Master Diagram I

(See Diagram II for Optional Installation)

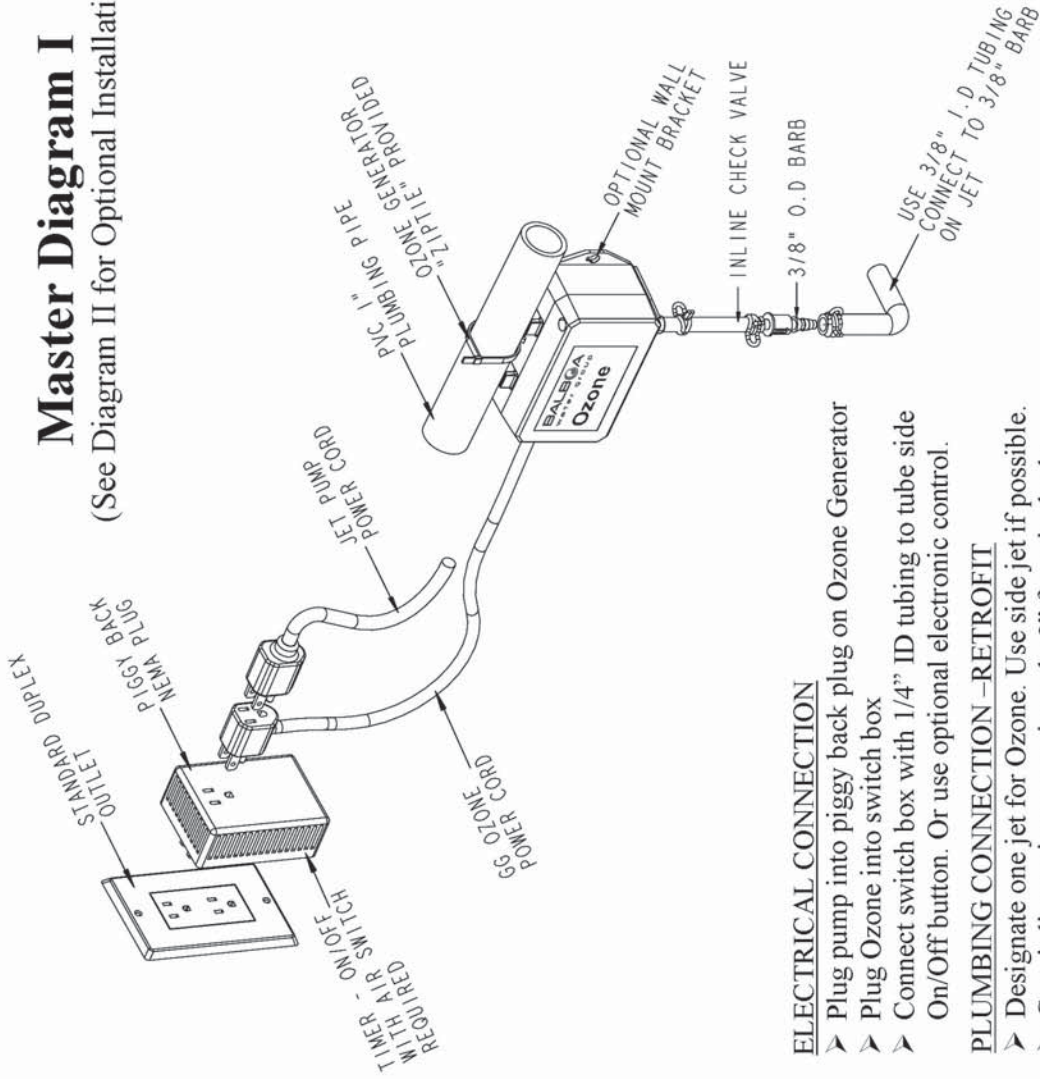

ELECTRICAL CONNECTION

- Plug pump into piggy back plug on Ozone Generator
- Plug Ozone into switch box
- Connect switch box with 1/4" ID tubing to tube side On/Off button. Or use optional electronic control.

PLUMBING CONNECTION -RETROFIT

- Designate one jet for Ozonite. Use side jet if possible.
- Cut air line to jet approximately 2" from jet body.
- Install 3/8" 90° barb x 1/2" slip (Part #73790) to cut tubing on jet.
- Install 1/2" cap (Part #447-005) to other half of cut tubing.
- Connect 3/8" barb from Ozonite Generator to 3/8" barbed elbow on jet.
- Using 3/8" ID white vinyl tubing.

