


## HAND HELD JET FOR MAGNA SERIES INSTRUCTIONS

1. Turn off circulation pump.
2. Remove eyeball (#7) or flowpath (#8 or #9) from the jet by pulling on snout of eyeball or flowpath spout. *\*\*It may be easier to remove therapy option with pump running and jet open. Block outlet with index finger and pull on snout of eyeball (#7) or flowpath (#8 or #9).*
3. Insert the adapter (#1) firmly into the jet. Rotate the adapter (#1) counterclockwise approximately 90° until it clicks. **TO REMOVE THE ADAPTER (#1)**, turn it counterclockwise approximately 1/8 of a turn or 45° and pull straight out.
4. The hole on the float (#3) must be above the water level to draw air.
5. Start the circulation pump.
6. Squeeze the trigger (#2) to start the hand held jet (#4) and release the trigger (#2) to stop it. If you do not get water flow through the hand held jet, rotate the jet handle (#10) 90° to be sure jet is open.

### TO CHANGE THERAPY OPTION IN HAND HELD JET:

Insert cage and eyeball (#5) (or flowpath #6) into hand held jet (#4) by pressing firmly to snap into place.

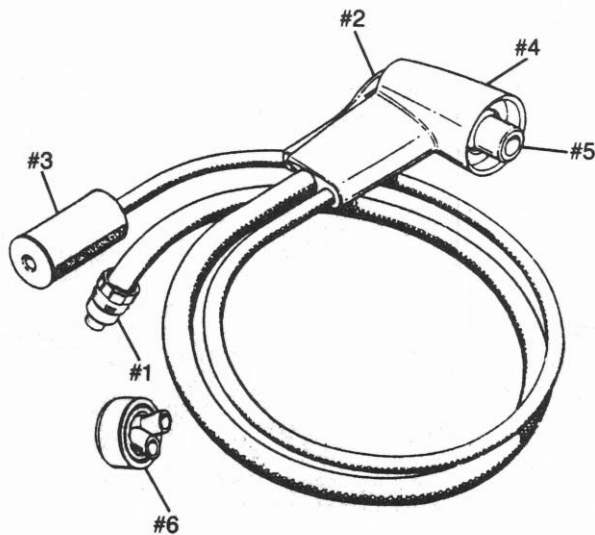

1. ADAPTER
2. TRIGGER
3. FLOAT
4. HAND HELD JET
5. CAGE & EYEBALL ASSEMBLY
6. DUAL PORT FLOWPATH
7. EYEBALL ASSEMBLY
8. DUAL PORT FLOWPATH ASSEMBLY
9. SINGLE PORT FLOWPATH ASSEMBLY
10. MAGNA SERIES JET HANDLE

